



External Diode Temperature Sense. Connect to the anode of a diode-connected PNP transistor in order to sense remote temperature. Directly connect the cathode using a separate ground return path to Pin 53 of the LTC3889. A bypass capacitor between the anode and cathode must be located in close proximity to the transistor.

Sheet: /Step-Down/		
File: Step-Down.kicad_sch		
Title: RF-Amplifier		
Size: A3	Date: 2021-12-10	Rev: A
KiCad E.D.A. kicad 6.0.3-a3aad9c10e-116-ubuntu20.04.1		Id: 9/9